

INSTRUCTION MANUAL


SIL 3 Switch/Proximity Detector Repeater Relay Output, Termination Board Models D5032S, D5032D






2

	Ordering Information
	Model: D5032
	1 channel S 2 channels D
	Front Panel and Features
STS 2 FLT 2 PWR 1 STS 1 FLT 1 SIL 3 D5032 7 Ø 9 Ø 9 Ø 9 Ø 0	 SIL 3 according to IEC 61508:2010 Ed. 2 for Tproof = 2 / 10 years (≤10% / >10 % of total SIF), considering 100 mA max contact current. SIL 2 according to IEC 61508:2010 Ed. 2 for Tproof = 20 years (≤10% of total SIF), considering 100 mA max contact current. PFDavg (1 year) 4.92 E-05, SFF 90.06 %, with independent channel configuration. PFDavg (1 year) 4.96 E-05, SFF 93.16 %, with D5032D used as duplicator (both channels) or as fault indicator (only 1st ch.). PFDavg (1 year) 4.66 E-05, SFF 93.53 %, with D5032D used as fault indicator (only 2nd ch.). Systematic capability SIL 3 2 fully independent channels. Input from Zone 0 (Zone 20), installation in Zone 2. NO/NC switch/proximity Detector Input, NE/ND relay actuation mode. Field open and short circuit detection. Three port isolation, Input/Output/Supply. EMC Compatibility to EN61000-6-2, EN61000-6-4, EN61326-1, EN61326-3-1 for safety system. In-field programmability by DIP Switch. ATEX, IECEX, UL & C-UL, FM, FMC, INMETRO, EAC-EX, CCC, UKR TR n. 898, TÜV Certifications. TÜV Functional Safety Certification. Type Approval Certificate DNV and KR for maritime applications. High Density, two channels per unit. Simplified installation using customized Termination Boards. 250 Vrms (Um) max. voltage allowed to the instruments associated with the barrier.
	Terminal block connections

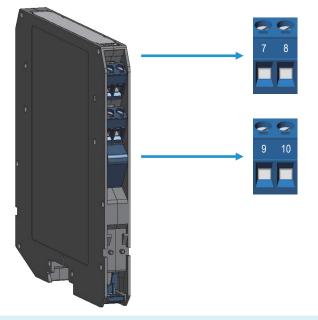

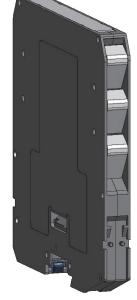

HAZARDOUS AREA

- 7 + Input Ch 1 for Proximity or Voltage free Contact
- 8 Input Ch 1 for Proximity or Voltage free Contact
- 9 + Input Ch 2 for Proximity or Voltage free Contact
- **10** Input Ch 2 for Proximity or Voltage free Contact


Parameters Table

In the system safety analysis, always check the Hazardous Area/Hazardous Locations devices to conform with the related system documentation, if the device is Intrinsically Safe check its suitability for the Hazardous Area/Hazardous Locations and group encountered and that its maximum allowable voltage, current, power (Ui/Vmax, Ii/Imax, Pi/Pi) are not exceeded by the safety parameters (Uo/Voc, Io/Isc, Po/Po) of the D5032 series Associated Apparatus connected to it. Also consider the maximum operating temperature of the field device, check that added connecting cable and field device capacitance and inductance do not exceed the limits (Co/Ca, Lo/La, Lo/Ro) given in the Associated Apparatus parameters for the effective group. See parameters indicated in the table below:

D5032 Terminals D5032 Associated Apparatus Parameters		Must be	Hazardous Area/ Hazardous Locations Device Parameters		
Ch1 Ch2	7 - 8 9 - 10	Uo / Voc = 10.5 V		≤	Ui / Vmax
Ch1 Ch2	7 - 8 9 - 10	lo / lsc = 22 r	nA	≤	li/ Imax
Ch1 Ch2	7 - 8 9 - 10	Po / Po = 56 r	nW	≤	Pi / Pi
D5032 Terminals		D5032 Associated A Parameters Cenel		Must be	Hazardous Area/ Hazardous Locations Device + Cable Parameters
Ch1	7 - 8	Co / Ca = 2.4 μF Co / Ca = 16.8 μF Co / Ca = 75 μF	IIC (A, B) IIB (C) IIA (D)	2	Ci / Ci device + C cable
Ch2	9 - 10	Co / Ca = 66 µF	IIIC (E, F, G)	~	
Ch1	7 - 8	Lo / La = 78.3 mH Lo / La = 313.4 mH Lo / La = 626.9 mH	IIC (A, B) IIB (C) IIA (D)	≥	Li / Li device + L cable
Ch2	9 - 10	Lo / La = 1028.6 mH	IIIC (E, F, G)	-	
Ch1	7 - 8	Lo / Ro = 635.9 μH/Ω Lo / Ro = 2543.9 μH/Ω Lo / Ro = 5087.9 μH/Ω	IIC (A, B) IIB (C) IIA (D)	2	Li / Ri device and
Ch2	9 - 10	Lo / Ro = 8347.4 μH/Ω Lo / Ro = 2543.9 μH/Ω	I Í	<	L cable / R cable

For installations in which both the Ci and Li of the Intrinsically Safe apparatus exceed 1% of the Co and Lo parameters of the Associated Apparatus (excluding the cable), then 50% of Co and Lo parameters are applicable and shall not be exceeded (50% of the Co and Lo become the limits which must include the cable such that Ci device + C cable \leq 50% of Co and Li device + L cable \leq 50% of Lo). The reduced capacitance of the external circuit (including cable) shall not be greater than 1 µF for Groups I, IIA, IIB and 600 nF for Group IIC. If the cable parameters are unknown, the following value may be used: Capacitance 200 pF per meter (60 pF per foot), Inductance 1 µH per meter (0.20 µH per foot).

4

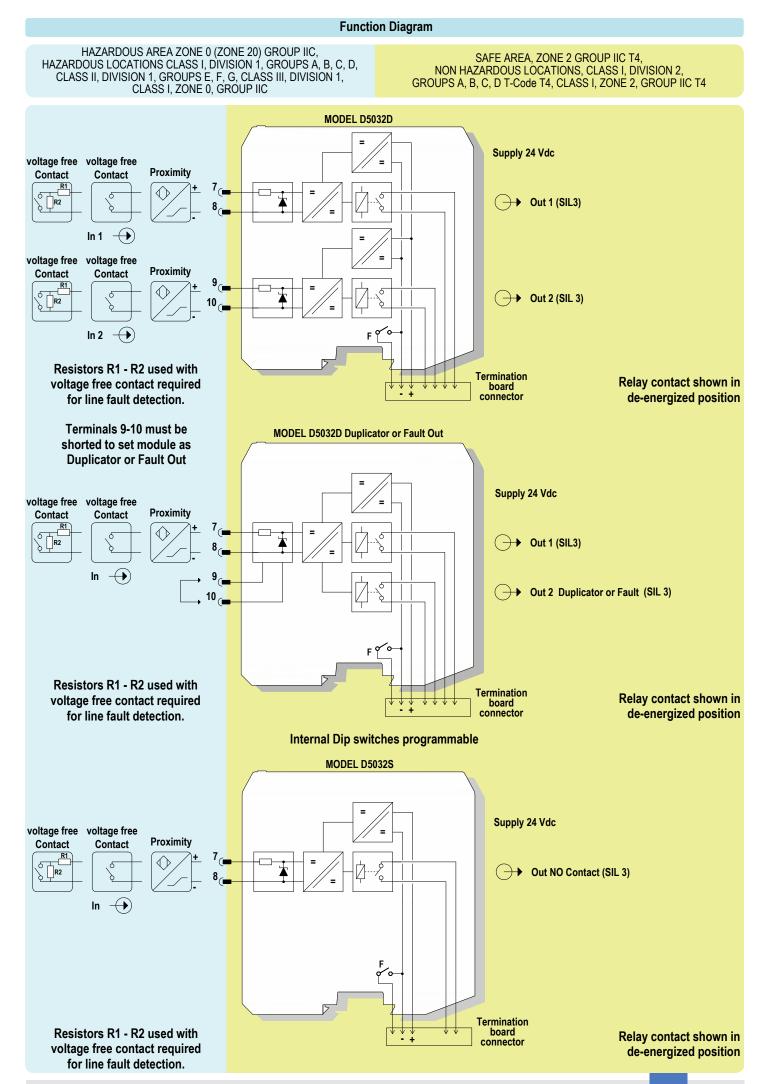

Warning

D5032 series are isolated Intrinsically Safe Associated Apparatus installed into standard EN50022 T35 DIN-Rail located in Safe Area or Zone 2, Group IIC, Temperature T4, Hazardous Area within the specified operating temperature limits Tamb -40 to +70 °C, and connected to equipment with a maximum limit for AC power supply Um of 250 Vrms. Not to be connected to control equipment that uses or generates more than 250 Vrms or Vdc with respect to earth ground.

D5032 series must be installed, operated and maintained only by qualified personnel, in accordance to the relevant national/international installation standards (e.g. IEC/EN60079-14 Electrical apparatus for explosive gas atmospheres - Part 14: Electrical installations in hazardous areas (other than mines)), following the established installation rules, particular care shall be given to segregation and clear identification of I.S. conductors from non I.S. ones.

De-energize power source (turn off power supply voltage) before plug or unplug the terminal blocks when installed in Hazardous Area or unless area is known to be nonhazardous. Warning: substitution of components may impair Intrinsic Safety and suitability for Zone 2.

Explosion Hazard: to prevent ignition of flammable or combustible atmospheres, disconnect power before servicing or unless area is known to be nonhazardous. Failure to properly installation or use of the equipment may risk to damage the unit or severe personal injury.

The unit cannot be repaired by the end user and must be returned to the manufacturer or his authorized representative.

Any unauthorized modification must be avoided.

Operation

D5032 module is a unit suitable for applications requiring SIL 3 level (according to IEC 61508) in safety related systems for high risk industries. The unit can be configured for switch or proximity detector (EN60947-5-6, NAMUR), NO or NC and for NE or ND SPST relay output contact.

Each channel enables a Safe Area load to be controlled by a switch, or a proximity detector, located in Hazardous Area.

Fault detection circuit (DIP switch configurable) is available for both proximity sensor and switch equipped with end of line resistors. In case of fault, when enabled it de-energizes the corresponding output relay and turns the fault LED on; when disabled the corresponding output relay repeats the input line open or closed status as configured.

D5032D is programmable via dip switches as single input and two independent outputs. Out 2 can be programmed for output duplicating Out 1 or Fault detection Out.

In case of duplication, relay actuation can be independently configured for each output.

In case of fault output, relay actuation can be programmed as normally energized or normally de-energized.

Presence of supply power and status of output (energized or de-energized), as well as integrity or fault condition of sensor and connecting line are displayed by signaling LEDs (green for power, yellow for status and red for fault condition).

Note: use of voltage free electrical contacts with fault detection enabled (control equipment) requires, near the switch at the end of the line a R1=1 KΩ typical (470 Ω to 2 KΩ range) resistor in series and a R2=10 kΩ typical (5 KΩ to 15 KΩ range) resistor in parallel to the contacts in order to allow the fault detection circuit to distinguish between a condition of contact close/open and a line open/short circuit fault.

Installation

D5032 series are Switch/Proximity Detector Interface housed in a plastic enclosure suitable for installation on customized Termination Board.

D5032 series can be mounted with any orientation over the entire ambient temperature range.

Electrical connection are accommodated by polarized plug-in removable screw terminal blocks which can be plugged in/out into a powered unit without suffering or causing any damage (for Zone 2 installations check the area to be nonhazardous before servicing). Connect only one individual conductor per each clamping point, use conductors up to 2.5 mm² (13 AWG) and a torque value of 0.5-0.6 Nm. The wiring cables have to be proportionate in base to the current and the length of the cable.

On the section "Function Diagram" and enclosure side a block diagram identifies all connections.

Identify the number of channels of the specific card (e.g. D5032S is a single channel model and D5032D is a dual channel model), the function and location of each connection terminal using the wiring diagram on the corresponding section, as an example:

For Model D5032S, in case of Proximity or Voltage free Contact, connect the wires at terminal "7" for positive and "8" for negative.

For Model D5032D in addition to channel 1 connections above, connect terminal "9" for positive and "10" for negative on channel 2.

Connection for power supply and output are provided by Termination Board connector.

Intrinsically Safe conductors must be identified and segregated from non I.S. and wired in accordance to the relevant national/international installation standards (e.g. EN/IEC60079-14 Electrical apparatus for explosive gas atmospheres - Part 14: Electrical installations in hazardous areas (other than mines)), make sure that conductors are well isolated from each other and do not produce any unintentional connection.

Connect SPST relay contacts checking the load rating to be within the contact maximum rating (100 mA 50 Vac 5 VA, 100 mA 50 Vdc 5 W (resistive load)).

The enclosure provides, according to EN60529, an IP20 minimum degree of protection (or similar to NEMA Standard 250 type 1). The equipment shall only be used in an area of at least pollution degree 2, as defined in IEC 60664-1. When installed in EU Zone 2, the unit shall be installed in an enclosure that provides a minimum ingress protection of IP54 in accordance with IEC 60079-0. When installed in a Class I, Zone 2 Hazardous Location, the unit shall be mounted in a supplemental AEx or Ex enclosure that provides a degree of protection not less than IP54 in accordance with UL/CSA 60079-0. When installed in a Class I, Division 2 Hazardous Location, the unit shall be mounted in a supplemental enclosure that provides a degree of protection not less than IP54. The enclosure must have a door or cover accessible only by the use of a tool. The end user is responsible to ensure that the operating temperature of the module is not exceeded in the end use application.

Units must be protected against dirt, dust, extreme mechanical (e.g. vibration, impact and shock) and thermal stress, and casual contacts.

If enclosure needs to be cleaned use only a cloth lightly moistened by a mixture of detergent in water.

Electrostatic Hazard: to avoid electrostatic hazard, the enclosure of D5032 series must be cleaned only with a damp or antistatic cloth.

Any penetration of cleaning liquid must be avoided to prevent damage to the unit. Any unauthorized modification must be avoided.

D5032 series must be connected to SELV or PELV supplies.

All circuits connected to D5032 series must comply with the overvoltage category II (or better) according to EN/IEC60664-1.


Start-up

Before powering the unit check that all wires are properly connected, particularly supply conductors and their polarity, input and output wires, also check that Intrinsically Safe conductors and cable trays are segregated (no direct contacts with other non I.S. conductors) and identified either by color coding, preferably blue, or by marking. Check conductors for exposed wires that could touch each other causing dangerous unwanted shorts. Turn on power, the "power on" green led must be lit, status and fault led on each channel must be in accordance with condition of the corresponding input line. If possible close and open input lines one at time checking the corresponding status and fault leds condition as well as output to be correct.

D5032D used as double channel


A configuration DIP switch is located on component side of pcb. This switch allows the configuration of input/output relationship, fault detection functions and operating mode.

WARNING: dip-switch 6-7-8 must be set to "OFF" position.

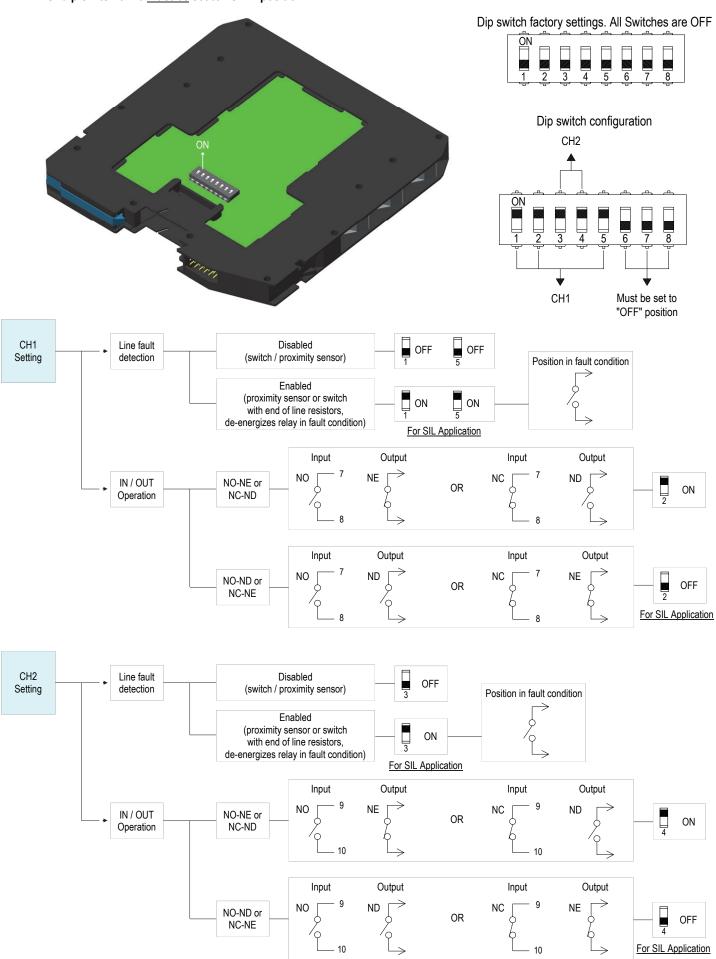

D5032D used as duplicator or fault output


A configuration DIP switch is located on component side of pcb. This switch allows the configuration of input/output relationship, fault detection functions and operating mode.

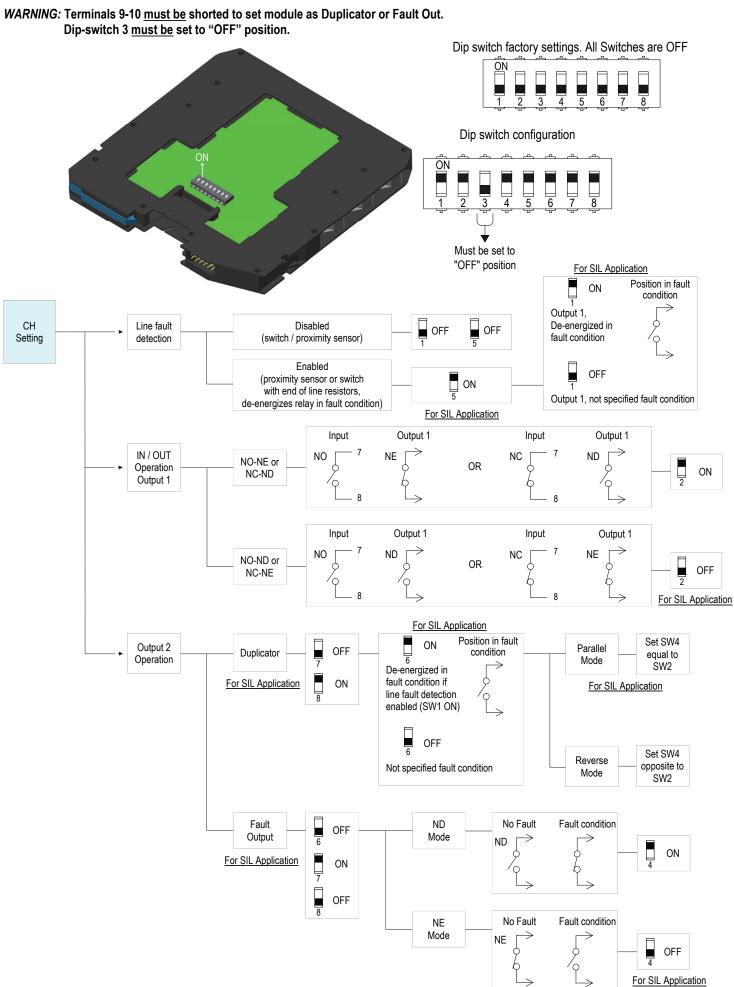

D5032S

A configuration DIP switch is located on component side of pcb. This switch allows the configuration of input/output relationship, fault detection functions and operating mode.

WARNING: Dip-switch 7-8 must be set to "OFF" position.

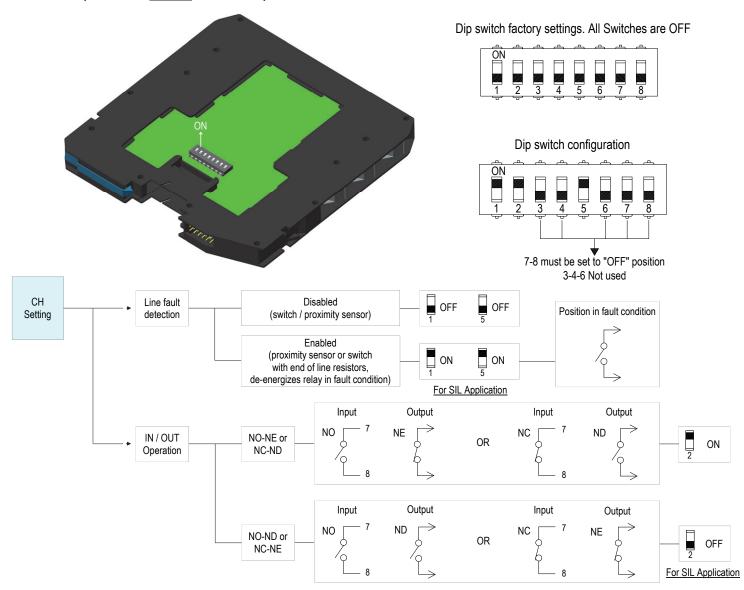

DIP Switch factory settings (valid for D5032S and D5032D)

SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
OFF							

D5032D (used as double channel) Configuration Summary Table

WARNING: dip-switch 6-7-8 must be set to "OFF" position.

Channel	1		1		1		1 2		2		Channel	1	
Line fault detection	SW1	SW5	SW3		IN/OUT Operation	SW2							
Disabled (switch/proximity sensor)	OFF	OFF	OFF	-	NO-NE or NC-ND	ON							
Enabled, <u>for SIL application</u> (proximity sensor or switch with end of line resistors, detects field open circuit and short circuit, de-energizes relay in fault condition)	ON	ON	ON		NO-ND or NC-NE (for SIL application)	OFF							

D5032D (used as duplicator or fault output) Configuration Summary Table

WARNING: Terminals 9-10 must be shorted to set module as Duplicator or Fault Out. Dip-switch 3 must be set to "OFF" position.

Line fault detection SW1			
Disabled (switch/proximity sensor)	OFF	OFF	
Enabled, <u>for SIL application</u> (proximity sensor or switch with end of line resistors, detects field open circuit and short circuit, de-energizes relay in fault condition)	Output 1, (for SIL application) ON De-energized in Fault condition		ON
	Output 1, Not specified Fault condition	OFF	

IN/OUT Operation Output 1	SW2
NO-NE or NC-ND	ON
NO-ND or NC-NE (for SIL application)	OFF

2 SW4

ON

OFF

Output 2 Operation	SW6		SW7	SW8	Mode	SW4
Duplicator	De-energized in fault condition (for SIL application) if line fault detection enabled (SW1 ON)	ON	OFF	ON	Parallel (<u>for SIL</u> <u>applica-</u> <u>tion</u>)	Set equal to SW2
	Not specified Fault condition	OFF			Reverse	Set opposite to SW2
					ND	ON
Fault Output	OFF (for SIL application)		ON	OFF	NE (<u>for SIL</u> <u>applica-</u> <u>tion</u>)	OFF

D5032S Configuration Summary Table

WARNING: Dip-switch 7-8 must be set to "OFF" position.

Line fault detection	SW1	SW5	IN/OUT Operation	SW2
Disabled (switch/proximity sensor)	OFF	OFF	NO-NE or NC-ND	ON
Enabled, <u>for SIL application</u> (proximity sensor or switch with end of line resistors, detects field open circuit and short circuit, de-energizes relay in fault condition)	ON	ON	NO-ND or NC-NE (for SIL application)	OFF