

D5294

SIL3 Relay Out Module for 5 A NE/ND Loads with LFD
Models D5294S



INSTRUCTION MANUAL

SUMMARY OF CONTENT

1. Characteristics	2
2. Technical data	3
3. Programming	4
4. Ordering information	4
4.1 Ordering codes	4
4.2 Accessories	4
5. OVERALL DIMENSIONS	5
6. Terminal block connections.....	5
6.1 Field Side.....	5
6.2 System Side	5
7. Function diagram	6
8. Warning	6
9. Operation	6
10. Installation	7
11. Start-up.....	7
12. Configuration.....	7
12.1 D5294D.....	8
13. PPC5092 Adapter - Operation	8
14. SWC5090 CONFIGURATION & MONITORING SOFTWARE	8
14.1 Configuration Parameters.....	8
14.2 Screenshots.....	9
15. Modbus parameters	9
15.1 Supported Modbus functions.....	9
15.2 Supported Modbus parameters	9
15.3 Modbus parameters details	11

1. CHARACTERISTICS

General Description: The D5294S is a relay module suitable for the switching of safety related circuits, up to SIL 3 level according to IEC 61508:2010 Ed. 2 for high risk industries. It provides isolation between input and output contacts. A wide compatibility towards different DCS/PLC is guaranteed: driving line pulse testing, executed by DCS/PLC, is permitted by a dedicated internal circuit, to prevent relay and LED flickering. Internal relay coil short circuit is detected by the module. D5294S has 2+2 SPST relay contacts connected in parallel and then in series to avoid spurious trips and to increase availability (see function diagram). High availability SIL 3 Safety Function for NE load or F&G / ND load is available at Terminal Blocks 13-14. When the driving signal is low (0 Vdc), the relay is de-energized, contacts at terminals 13-15 and 14-16 are open and load is de-energized. When the driving signal is high (24 Vdc), the relay is energized, contacts at terminals 13-15 and 14-16 are closed, the load is energized. Load is isolated from supply on both polarities: +/AC, -/AC.

Load and Line Diagnostic: Line and load short/open circuit detection is provided, with solenoid resistance measurement, even in presence of series connected diodes. A patented proprietary resistance measuring technique performs the load short and open circuit diagnosis in de-energized load status, for DC or AC supply systems. Load RMS voltage (before and after its energization) and current are measured by the module. Load voltage, current and resistance can automatically be acquired from field. User configurable limits set the minimum and maximum values of load resistance, supply voltage (DC or AC) and load current. Earth leakage detection on both AC phases is available in de-energized load condition. The fault in the field is directly mirrored to the PLC DO: few systems may exceptionally require an external resistor at terminals 7 and 8. All diagnostic conditions, that detect a fault on line and load, open the fault relay contacts and are also available from a RS485 Modbus output to identify any specific fault. Diagnostic functions with fault relay NO contacts are SIL 2 rated according to IEC 61508:2010 Ed.2 (Route 2H). Mounting on standard DIN-Rail, with or without Power Bus, or on customized Termination Boards, in Safe Area / Non Hazardous Location or in Zone 2 / Class I, Division 2 or Class I, Zone 2.

Functional Safety Management Certification:

G.M. International is certified by TUV to conform to IEC61508:2010 part 1 clauses 5-6 for safety related systems up to and included SIL3.

2. TECHNICAL DATA

Supply: 24 Vdc nom (21.6 to 27.6 Vdc) reverse polarity protected, ripple within voltage limits ≤ 5 Vpp, 2 A time lag fuse internally protected.

Current consumption @ 24 V: 40 mA typical, with channel de-energized and no fault.

Power dissipation: 1 W typical.

Isolation (Test Voltage): Output/Input 2.5 KV; Output/Supply 2.5 KV; Output/Fault Outputs 2.5 KV; Output/RS485 Modbus 2.5 KV;

Input/Supply 500 V; Input/Fault Output 1 500 V; Input/Fault Output 2 2.5 KV; Input/RS485 Modbus 500 V; Supply/Fault Output 1 500 V;

Supply/Fault Output 2 2.5 KV; Supply/RS485 Modbus 500 V.

Input: 24 Vdc nom (21.6 to 27.6 Vdc) reverse polarity protected, ripple within voltage limits ≤ 5 Vpp.

Current consumption @ 24 V: 40 mA (with mirror and no fault).

Power dissipation @ 24 V: 1 W (with mirror and no fault).

Output: voltage free 2+2 SPST relay contact (2 paralleled contacts in series) at terminals 13-15 and 14-16, close when relay energized, open in de-energized condition.

Contact material: Ag Alloy (Cd free), gold plated.



Contact rating: 5 A 250 Vac 1250 VA, 5 A 250 Vdc 140 W (resistive load). Min. switching current 1 mA.

Contact inrush current: 6 A at 24 Vdc, 250 Vac.

Mechanical / Electrical life: $5 \cdot 10^6 / 3 \cdot 10^4$ operation, typical.

Operate / Release time: 30 / 30 ms, typical.

AC / DC Load breaking capacity:

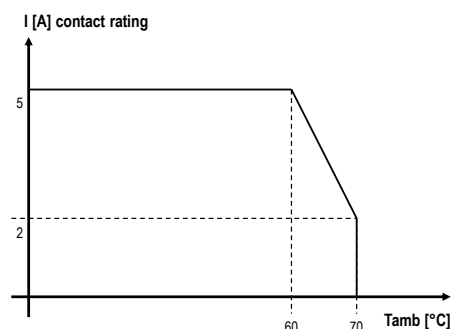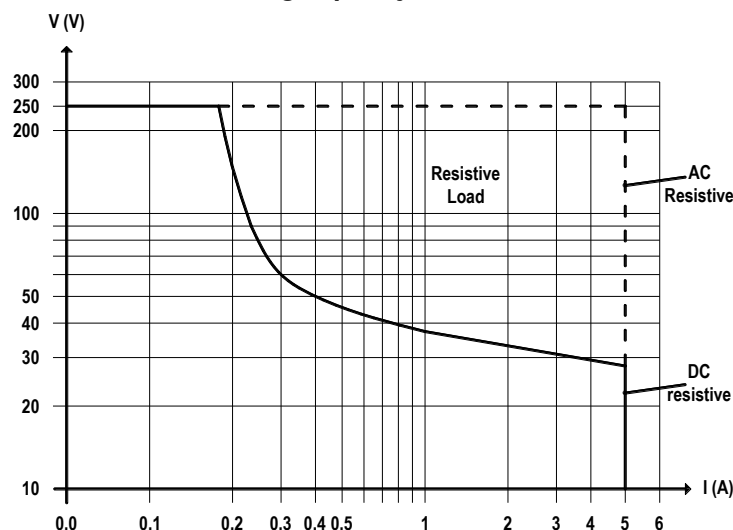

Fault detection: load and line short/open circuit monitoring

De-energized diagnostic signal: 5.5 V open circuit, 10 mA short circuit, typical.

Short output detection: programmable load resistance (5 Ω to 49 K Ω typical).

Open output detection: programmable load resistance (5 Ω to 49 K Ω typical).

Fault signalling: voltage free NE 1 + 1 SPST relay contacts (closed in normal status), output de-energized (contacts opened) in fault condition. Fault contact can be reversed via software.

To acquire the cumulative fault signal on the power bus, GM D5202S or D5203S module must be used. For details on their features and differences, see proper documentation - datasheet and instruction manual - for these models.

Fault 1 output rating: 500 mA 30 Vac 15 VA, 500 mA 50 Vdc 25 W (resistive load).

Fault 2 output rating: 3 A 250 Vac 750 VA, 3 A 125 Vdc 120 W (resistive load).

Response time: 3/4 sec typical.

Modbus Output: measure data, load and line diagnostic monitoring. Modbus RTU protocol up to 115.2 Kbit/s with RS-485 connection on terminal blocks and Power Bus connector.

Terminating impedance: 100 Ω software selectable,

Transmission speed: 4.8, 9.6, 19.2, 38.4, 57.6, 115.2 Kbit/s.

Transmission cable length: ≤ 1200 m up to 93.75 Kbit/s, ≤ 1000 m up to 115.2 Kbit/s.

Compatibility:

CE mark compliant, conforms to Directive: 2014/34/EU ATEX, 2014/30/EU EMC, 2014/35/EU LVD, 2011/65/EU RoHS.

Environmental conditions:

Operating: temperature limits – 40 to + 70 °C, relative humidity 95 %, up to 55 °C.

Storage: temperature limits - 45 to + 80 °C.

Max altitude: 2000 m a.s.l.

Safety Description:

ATEX: II 3G Ex ec nC IIC T4 Gc

IECEx / INMETRO: Ex ec nC IIC T4 Gc

FM: NI / I / 2 / ABCD / T4, I / 2 / AEx nA nC / IIC / T4

FMC: NI / I / 2 / ABCD / T4, I / 2 / Ex nA nC / IIC / T4 (-40 °C ≤ Ta ≤ +60 °C)

EAC-EX: 2Ex ec nC IIC T4 Gc X.

CCC: Ex ec nC IIC T4 Gc

PESO: Ex ec nC IIC T4 Gc

non-sparking electrical equipment.

Approvals:

BVS 10 ATEX E 114 conforms to EN60079-0, EN60079-7, EN60079-15.

IECEx BVS 10.0072 X conforms to IEC60079-0, IEC60079-7, IEC60079-15

INMETRO DNV 13.0109 X conforms to ABNT NBR IEC60079-0, ABNT NBR IEC60079-7, ABNT NBR IEC60079-15.

FM 3046304 and FMC 3046304C conforms to Class 3600, 3611, 3810, ANSI/ISA-60079-0, ANSI/ISA-60079-15, C22.2 No.142, C22.2 No.213, C22.2 No. 60079-0, C22.2 No. 60079-15.

EAЭC RU C-IT.AA87.B.01310/24 conforms to GOST 31610.0, GOST 31610.7, GOST 31610.15.

CCC n. 2020322316000978 conforms to GB/T 3836.1, GB/T 3836.3, GB/T 3834.8

PESO P652307 conforms to IEC60079-0, IEC60079-7, IEC60079-15

TÜV Certificate No. TUV IT 25 SIL 0633, SIL 3 conforms to IEC61508:2010 Ed.2.

TÜV Certificate No. TUV IT 25 SIL 0636, SIL 2 conforms to IEC61508:2010 Ed.2 (Route 2H) for Line and Load Diagnostic Functionalities with fault relay NO contacts.

SIL 3 Functional Safety TÜV Certificate conforms to IEC61508:2010 Ed.2, for Management of Functional Safety.

DNV Type Approval Certificate No. TAA00001U0 and KR No.MIL20769-EL002 Certificates for maritime applications.

Patent No. 0001406495, released on 28/02/2014, valid for 20 years.

Mounting: EN/IEC60715 TH 35 DIN-Rail, with or without Power Bus or on customized Termination Board.

Weight: about 195 g.

Connection: by polarized plug-in disconnect screw terminal blocks to accommodate terminations up to 2.5 mm².

Location: installation in Safe Area/Non Hazardous Locations or Zone 2, Group IIC T4 or Class I, Division 2, Group A,B,C,D, T4 or Class I, Zone 2, Group IIC, T4.

Protection class: IP 20.

Dimensions: Width 22.5 mm, Depth 123 mm, Height 120 mm.

3. PROGRAMMING

The module is fully programmable to set the operation parameters from PC by the GM Pocket Portable Adapter PPC5092 via USB serial line and SWC5090 Configurator software. Measured values and diagnostic alarms can be read on both serial configuration or Modbus output line.

F = available function

PF = available function with programmable thresholds

Load status	Load voltage	Load open circuit	Load short circuit	Load to earth leakage	Internal coil short
OFF	PF	PF	PF	PF	
ON	PF	PF	PF		F

4. ORDERING INFORMATION

4.1 Ordering codes


D5294S: 1 channel

4.2 Accessories

Bus Connector JDFT050, Bus Mounting Kit OPT5096.

Programmable USB serial line Kit PPC5092 + SWC5090.

5. OVERALL DIMENSIONS

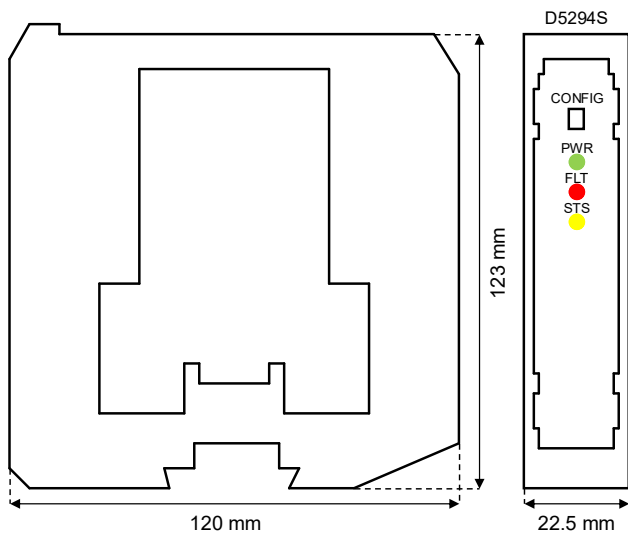

6. TERMINAL BLOCK CONNECTIONS


6.1 Field Side

- 13: (SIL 3) + Output NE Load or F&G/ND Load
- 14: (SIL 3) - Output NE Load or F&G/ND Load
- 15: + Load Power DC/AC
- 16: - Load Power DC/AC
- 21: Earth
- 22: Not used
- 23: Not used
- 24: Not used

6.2 System Side

- 1: + Input
- 2: - Input
- 3: (SIL 2) Fault Output 1 (30 V, 500 mA)
- 4: (SIL 2) Fault Output 1 (30 V, 500 mA)
- 5: A- Modbus Input/Output RS485
- 6: B+ Modbus Input/Output RS485
- 7: (Optional external resistor)
- 8: (Optional external resistor)
- 9: + Power Supply 24 Vdc
- 10: - Power Supply 24 Vdc
- 11: (SIL 2) Fault Output 2 (250 V, 3 A)
- 12: (SIL 2) Fault Output 2 (250 V, 3 A)

7. FUNCTION DIAGRAM

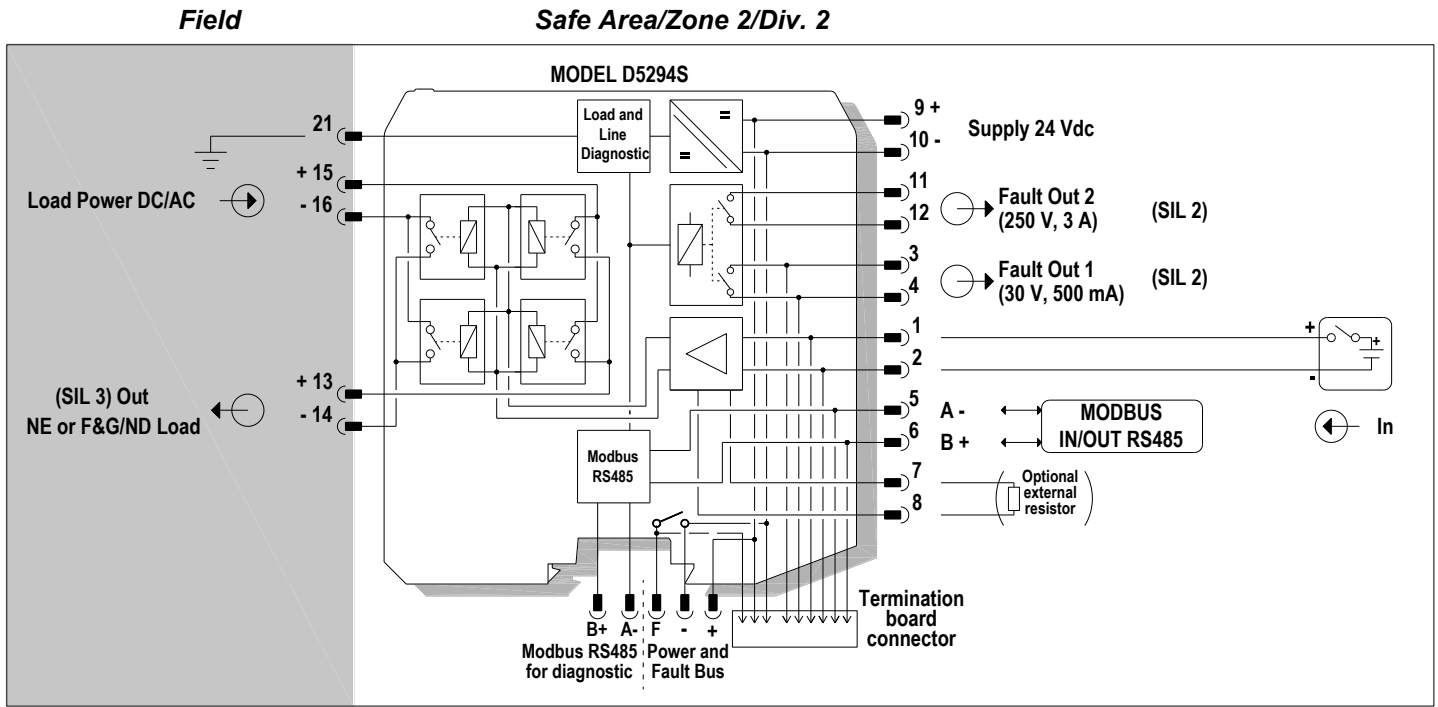

All relay contacts are shown in de-energized position.

To prevent relay contacts from damaging, connect an external protection (fuse or similar), chosen according to the relay breaking capacity diagram.

8. WARNING

D5294 series is an electrical apparatus installed into EN/IEC60715 TH 35 DIN-Rail located in Safe Area or Zone 2, Group IIC, Temperature Classification T4, Hazardous Area within the specified operating temperature limits $T_{amb} - 40$ to $+70^{\circ}\text{C}$. D5294S must be installed, operated and maintained only by qualified personnel, in accordance to the relevant national/international installation standards (e.g. IEC/EN60079-14 Electrical apparatus for explosive gas atmospheres - Part 14: Electrical installations in hazardous areas (other than mines)), following the established installation rules. De-energize power source (turn off power supply voltage) before plug or unplug the terminal blocks when installed in Hazardous Area or unless area is known to be nonhazardous.

Warning: substitution of components may impair suitability for Zone 2. Warning: de-energize main power source (turn off power supply voltage) and disconnect plug-in terminal blocks before opening the enclosure to avoid electrical shock when connected to live hazardous potential. Explosion Hazard: to prevent ignition of flammable or combustible atmospheres, disconnect power before servicing or unless area is known to be nonhazardous. Failure to properly installation or use of the equipment may risk to damage the unit or severe personal injury. The unit cannot be repaired by the end user and must be returned to the manufacturer or his authorized representative. Any unauthorized modification must be avoided.

9. OPERATION

The single channel 5 A Relay Output D5294S is a relay module suitable for the switching of safety related circuits, up to SIL 3 level according to IEC 61508:2010 Ed.2 for high risk industries. It provides isolation between input and output contacts. D5294S has 2+2 SPST relay contacts connected in parallel and then in series to avoid spurious trip and to increase availability (see function diagram). High availability SIL 3 Safety Function for NE load or F&G/ND load is available at Terminal Blocks 13-14. When the driving signal is low (0 Vdc), the relay is de-energized, contacts at terminals 13-15 and 14-16 are open and load is de-energized. When the driving signal is high (24 Vdc), the relay is energized, contacts at terminals 13-15 and 14-16 are closed and the load is energized. Presence of diagnostic circuit power supply, status of input / output channel (energized or de-energized), as well as any type of fault condition (line and load short/open circuit, relay coil short circuit, etc.) are displayed by related signalling LEDs: green power supply, yellow for status channel and red for fault.

10. INSTALLATION

D5294 series is a relay output module housed in a plastic enclosure suitable for installation on EN/IEC60715 TH 35 DIN-Rail, with or without Power Bus or on customized Termination Board. D5294 series can be mounted with any orientation over the entire ambient temperature range. Electrical connection are accommodated by polarized plug-in removable screw terminal blocks which can be plugged in/out into a powered unit without suffering or causing any damage (**for Zone 2 installations check the area to be nonhazardous before servicing**). Connect only one individual conductor per each clamping point, use conductors up to 2.5 mm² (13 AWG) and a torque value of 0.5-0.6 Nm. The wiring cables have to be proportionate in base to the current and the length of the cable.

On the section "Function Diagram" and enclosure side a block diagram identifies all connections. Identify the function and location of each connection terminal using the wiring diagram on the corresponding section, as an example:

- Connect 24 Vdc power supply positive at terminal "9" and negative at terminal "10".
- Connect positive input at terminal "1" and negative input at "2".
- Connect Fault output 1 (30 V, 500mA) at terminals "3" and "4" and Fault output 2 (250 V, 3A) at terminals "11" and "12".
- Connect A- Modbus RS485 for diagnostic at terminal "5" and B+ at terminal "6".
- Connect positive output NE or F&G/ND load at terminal "13" and negative at terminal "14".
- Connect positive Load Power DC/AC at terminal "15" and negative at terminal "16".
- Connect ground at terminal "21".

Installation and wiring must be in accordance to the relevant national or international installation standards (e.g. IEC/EN60079-14 Electrical apparatus for explosive gas atmospheres Part 14: Electrical installations in hazardous areas (other than mines)), make sure that conductors are well isolated from each other and do not produce any unintentional connection.

Connect 2+2 SPST relay contacts checking the load rating to be within the contact maximum rating 5 A 250 Vac 1250 VA, 5 A 250 Vdc 140 W (resistive load). **To prevent relay contacts from damaging, connect an external protection (fuse or similar), chosen according to the relay breaking capacity diagram on data sheet.** The enclosure provides, according to EN60529, an IP20 minimum degree of protection (or similar to NEMA Standard 250 type 1). The equipment shall only be used in an area of at least pollution degree 2, as defined in IEC 60664-1. When installed in EU Zone 2, the unit shall be installed in an enclosure that provides a minimum ingress protection of IP54 in accordance with IEC 60079-0. The enclosure must have a door or cover accessible only by the use of a tool. The end user is responsible to ensure that the operating temperature of the module is not exceeded in the end use application. Units must be protected against dirt, dust, extreme mechanical (e.g. vibration, impact and shock) and thermal stress, and casual contacts. If enclosure needs to be cleaned use only a cloth lightly moistened by a mixture of detergent in water.

Electrostatic Hazard: to avoid electrostatic hazard, the enclosure of D5294 series must be cleaned only with a damp or antistatic cloth. Any penetration of cleaning liquid must be avoided to prevent damage to the unit. Any unauthorized card modification must be avoided. D5294 series must be connected to SELV or PELV supplies. All circuits connected to D5294 series must comply with the overvoltage category II (or better) according to EN/IEC60664-1.

Warning: de-energize main power source (turn off power supply voltage) and disconnect plug-in terminal blocks before opening the enclosure to avoid electrical shock when connected to live hazardous potential.


11. START-UP

Before powering the unit check that all wires are properly connected, particularly supply conductors and their polarity, input and output wires. Check conductors for exposed wires that could touch each other causing dangerous unwanted shorts. Turn on power for diagnostic circuit, the "power on" green led must be lit. Enabling input, the channel status yellow led must be lit and load circuit must be energized because 2+2 SPST relay output contacts are closed. Instead, disabling input, the channel status yellow led must be turned off and load circuit must be de-energized because 2+2 SPST relay output contacts are open.


12. CONFIGURATION

An output configuration DIP Switch is located on component side of PCB. These switches allow the T-proof relays and diagnostic circuits test (SW1 dip-switch: 1-2-3-4 set "ON" and see "Testing procedure at T-proof for functional safety relay and diagnostic applications" on ISM0442 Safety Manual).

12.1 D5294D

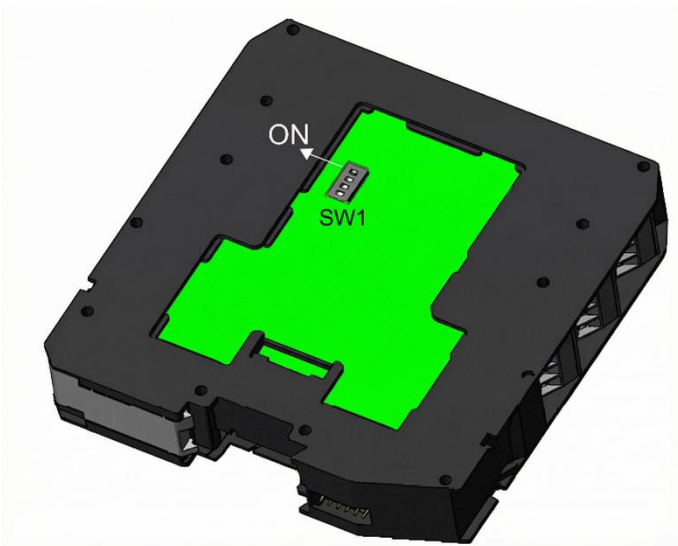

SW1 Dip switch configuration

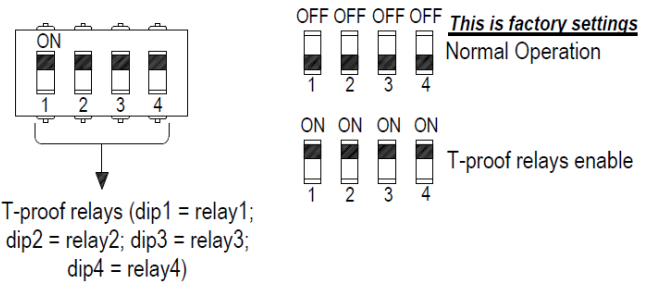

WARNING: after T-proof test, dip-switch 1-2-3-4 must be set to “OFF” position for normal operation.

13. PPC5092 ADAPTER - OPERATION

The Pocket Portable Adapter type PPC5092 is suitable to connect the module D5294S to a PC via USB serial line, in order to configure and to monitor the operation parameters by means of SWC5090 software. The PPC5092 unit is connected to D5294S by mini USB and to PC by USB port. This adapter is not ATEX, UL or FM approved and is only to be used in Safe Area/Non Hazardous Locations. Do not use PPC5092 in Hazardous Area/Hazardous Locations. The PPC5092 adapter is powered by the PC (no battery power) when its USB port is plugged into the PC. It has a green LED as power-on indication.

14. SWC5090 CONFIGURATION & MONITORING SOFTWARE

14.1 Configuration Parameters

USER MANUAL SETTINGS:

Load Supply Voltage RMS

- Voltage Upper Limit (V): Maximum allowed load RMS voltage
- Voltage Lower Limit (V): Minimum allowed load RMS voltage

Load Current RMS

- Current Upper Limit (A): Maximum allowed load RMS current
- Current Lower Limit (A): Minimum allowed load RMS current

Load OFF Resistance

- Resistance Upper Limit (Ω): Maximum allowed load OFF resistance
- Resistance Lower Limit (Ω): Minimum allowed load OFF resistance

Isolation Resistance

- Resistance Lower Limit ($k\Omega$): Minimum allowed load-to-earth isolation resistance

FAULT CONDITIONS MONITORING (Command Status [ON]):

Faults contributing to the output cumulative fault when the driver is on.

- Load Supply Voltage:
When checked, the load supply voltage can activate the cumulative fault.
- Load Current:
When checked, the load current can activate the cumulative fault.
- Coil Integrity:
When checked, the short circuit of any coil can activate the cumulative fault.

FAULT CONDITIONS MONITORING (Command Status [OFF]):

Faults contributing to the output cumulative fault when the driver is off.

- **Load Supply Voltage:**
When checked, the load supply voltage can activate the cumulative fault.
- **Load OFF Resistance:**
When checked, the load OFF resistance can activate the cumulative fault.
- **Isolation Resistance:**
When checked, the load-to-earth isolation resistance can activate the cumulative fault.

TAG: Identification of the specific operating loop of the module.

ACQUIRE FUNCTIONS: Acquisition and saving of the diagnostics field parameters.

- **Acquire OFF parameters:**
The currently measured OFF parameters are copied to the USER MANUAL SETTINGS (available only when the driver is OFF).
- **Acquire ON parameters:**
The currently measured ON parameters are copied to the USER MANUAL SETTINGS (available only when the driver is ON).

CONTINUOUS SCAN: Continuous measurement of the field parameters.


- **Start/Stop:** Activates/de-activates the measurement of the field parameters.

INVERT FAULT RELAY: When not checked, the output fault contacts open in case of fault. When checked, the output fault contacts close in case of fault.


For SIL application, this field must NOT be checked.

Note: For advanced options and details on SWC5090, please refer to ISM0154.

14.2 Screenshots

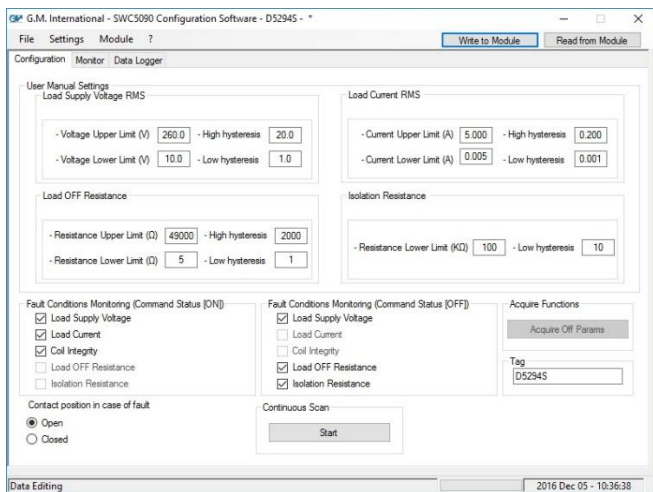

Configuration

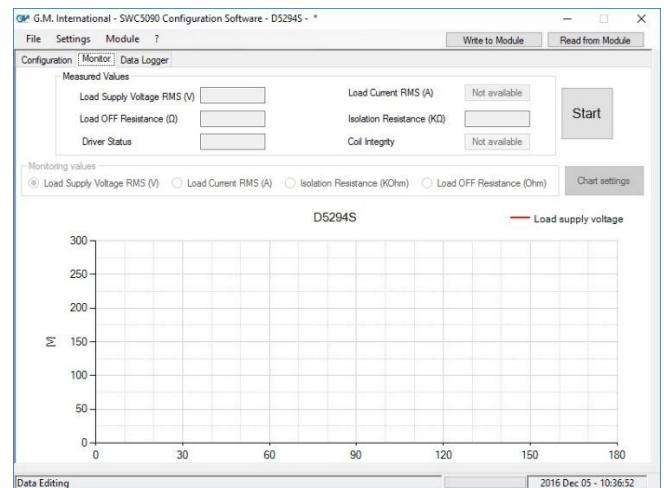

Monitor

15. MODBUS PARAMETERS

15.1 Supported Modbus functions

Code	Name	Notes
03	read holding registers	reads a stream of words from memory
04	read input registers	reads a stream of words from memory
08	diagnostics: subcode 0	returns query data
06	write single register	writes a word in memory
16	write multiple registers	writes a stream of words in memory

15.2 Supported Modbus parameters

The unit can communicate via Modbus RTU RS-485 protocol. Below is a list of all available registers.

Each Modbus parameter is described by one 16-bit word.

- 'Addr.' is the address of the parameter.

- 'Description' explains the function of the parameter.
- 'Rights' identifies the operation that can be executed by the user:
RO (Read Only);
WO (Write Only);
RW (Read and Write).
- 'Type' indicates the kind of the variable:
SINT8 / UINT8: signed / unsigned 8 bits integer;
SINT16 / UINT16: signed / unsigned 16 bits integer;
SINT32 / UINT32: signed / unsigned 32 bits integer;
FLOAT: floating point single precision real;
DOUBLE: floating point double precision real;
the suffix '[n]' indicates an array of n elements of the corresponding type.

IDENTIFICATION DATA

Addr.	Description	Rights	Type
0	G.M. Factory Code	RO	UINT16
1	Instrument Code	RO	UINT16
2	Option Code	RO	UINT16
3	Hardware Release	RO	UINT16
4	Software Release	RO	4

COMMUNICATION DATA

Addr.	Description	Rights	Type
16	Modbus Address	RW	UINT16
17	Modbus Baudrate *1	RW	UINT16
18	Modbus Format *2	RW	UINT16

INPUT DATA

Addr.	Description	Rights	Type
64	Measured Load Voltage (Expressed in 100 mV.)	RO	UINT16
65	Measured Load Current (Expressed in mA.)	RO	UINT16
66	Measured Load Resistance (Expressed in Ω)	RO	UINT32
68	Measured Isolation Resistance (Expressed in k Ω)	RO	UINT16
69	Driver Status (0=OFF; 1=ON.)	RO	UINT16
70	Coil Integrity (0= Fault; 1= Ok)	RO	UINT16
72	Masked Fault Status *3	RO	UINT16

INPUT CONFIGURATION

Addr.	Description	Rights	Type
101	Load Voltage Upper Limit (Expressed in 100 mV.)	RW	UINT16
102	Load Voltage Lower Limit (Expressed in 100 mV.)	RW	UINT16
103	Load Current Upper Limit (Expressed in mA.)	RW	UINT16
104	Load Current Lower Limit (Expressed in mA.)	RW	UINT16
105	Load Resistance Upper Limit (Expressed in Ω)		UINT32
107	Load Resistance Lower Limit (Expressed in Ω)		UINT32
109	Isolation Resistance Lower Limit (Expressed in k Ω)		
112	Fault Mirror Configuration (0=Fault mirror; 1=Always OFF; 2=Always ON.)	RW	UINT16
113	Invert Fault Relay (0=no inversion (open: fault, for SIL application); 1=inverted (open: ok).)	RW	UINT16

Addr.	Description	Rights	Type
114	Load Voltage Upper Hysteresis (Expressed in 100 mV.)	RW	UINT16
115	Load Voltage Lower Hysteresis (Expressed in 100 mV.)	RW	UINT16
116	Load Current Upper Hysteresis (Expressed in mA.)	RW	UINT16
117	Load Current Lower Hysteresis (Expressed in mA.)	RW	UINT16
118	Load Resistance Upper Hysteresis (Expressed in Ω)	RW	UINT16
119	Load Resistance Lower Hysteresis (Expressed in Ω)	RW	UINT16
120	Isolation Resistance Hysteresis (Expressed in k Ω)	RW	UINT16

FAULT CONDITIONS

Addr.	Description	Rights	Type
224	Fault Mask (Driver ON) Alarm Control *4	RW	UINT16
225	Fault Mask (Driver OFF) *4	RW	UINT16

COMMAND

Addr.	Description	Rights	Type
464	Command execution *5	WO	UINT16

TAGS

Addr.	Description	Rights	Type
548-555	Tag (Tags are composed of 16 characters. Each address contains 2 chars, starting from left.)	RW	UINT8

15.3 Modbus parameters details

*1 Modbus Baudrate

Bit pos.	Value	Description
0..2	0	baud rate = 4800 bit/s
	1	baud rate = 9600 bit/s
	2	baud rate = 19200 bit/s
	3	baud rate = 38400 bit/s
	4	baud rate = 57600 bit/s
	5	baud rate = 115200 bit/s

*2 Modbus Format

Bit pos.	Value	Description
0..1	0	8 data bit, no parity, 1 stop bit
	1	8 data bit, even parity, 1 stop bit
	2	8 data bit, odd parity, 1 stop bit
2..2	0	termination resistance off
	1	termination resistance on
3..3	0	32-bit endianness little
	1	32-bit endianness big

*3 Fault Status

Bit pos.	Value	Description
0..0	0	Load Voltage Ok
	1	Load Voltage Fault
1..1	0	Load Current Ok

	1	Load Current Fault
2..2	0	Load Resistance Ok
	1	Load Resistance Fault
3..3	0	Isolation Resistance Ok
	1	Isolation Resistance Fault
4..4	0	Coil Integrity Ok
	1	Coil Integrity Fault

*4 Fault Mask

Bit pos.	Value	Description
0..0	0	Load Voltage Ok
	1	Load Voltage Fault
1..1	0	Load Current Ok
	1	Load Current Fault
2..2	0	Load Resistance Ok
	1	Load Resistance Fault
3..3	0	Isolation Resistance Ok
	1	Isolation Resistance Fault
4..4	0	Coil Integrity Ok
	1	Coil Integrity Fault

*5 Command List

Bit pos.	Value	Description
0..3	1	Save Input/Output Configuration
	2	Save Modbus Configuration
	8	Save Tags